


Ratcheting Rhino Grip



Product Instructions | Part No: 21540

Before you begin, read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information. **Note: If any hardware is missing, do not return to the store. Call us to help, Toll Free 1-877-956-5746.**

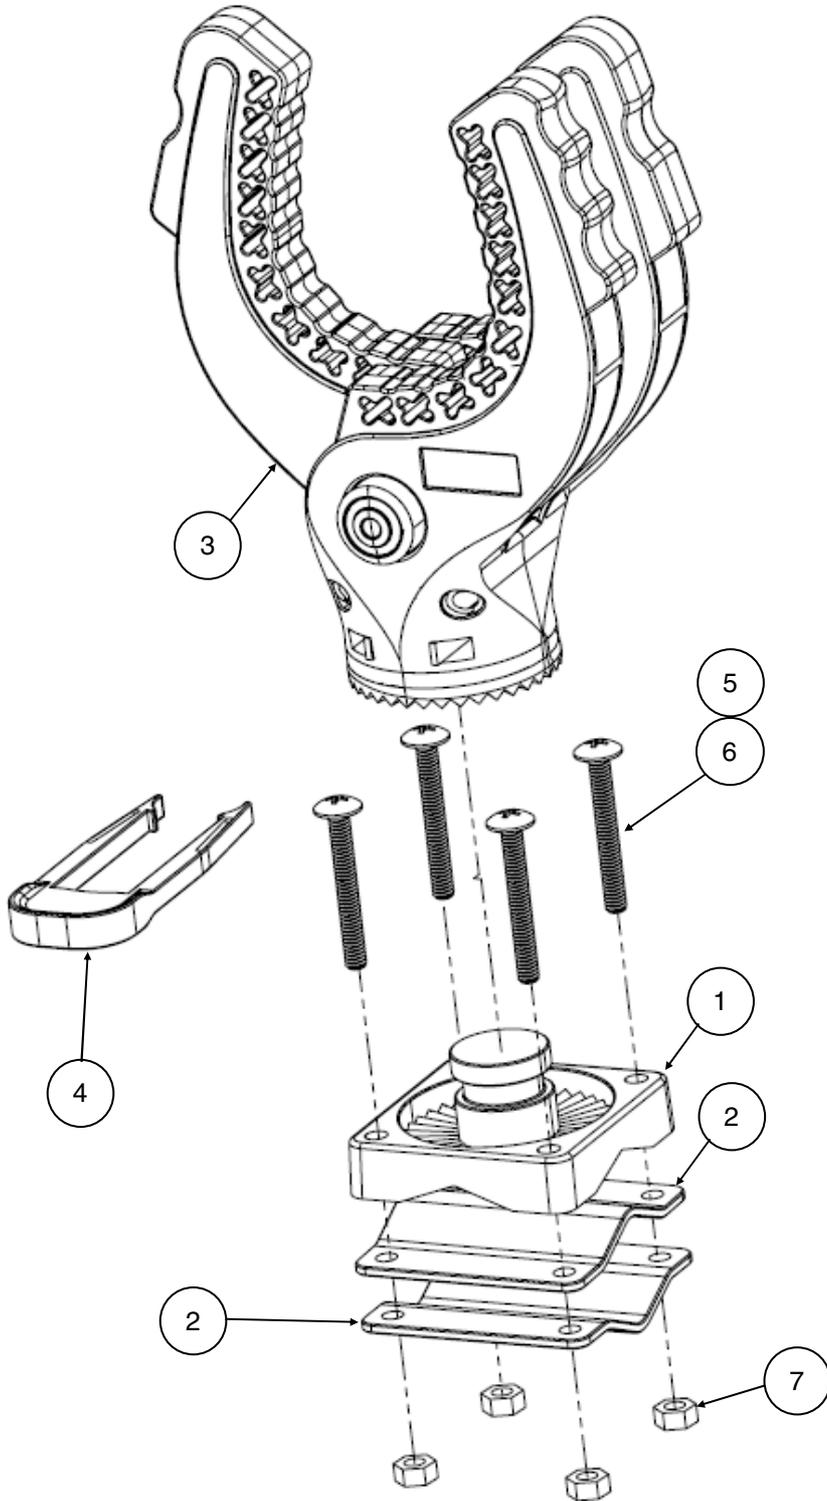

Kit contents:

Item	Qty	Part Description	Spare P/N
1	2	Plastic Mounting Base	71541
2	4	Metal Backer Plate	71513
3	2	Ratcheting Rhino Grip	-
4	2	Kwik Clip	71540
5	8	Truss Screw, Zinc Plated, 1/4-20 x 2.5" LG	-
6	8	Truss Screw, Zinc Plated, 1/4-20 x 1.5" LG	-
7	8	Locknut, Zinc Plated, 1/4-20	-
8	4	Flat Rubber Strip Pad (not shown)	-

These grips are designed to quickly and easily universal mount to any tubular bar (example UTV roll cage or ATV rack) or flat drillable surface. The grips can be used in the vertical and horizontal positions. The kit fits tubing sizes from 5/8" to 2.0" in diameter. **Note, hardware provided is based on the largest tube diameter. You may need to trim the excess threads once installed. Failure to do so may result in damage to your vehicle.**

Grip Mounting Instructions:

1. Position the Ratcheting Rhino Grip mounting base (item #1) on the roll bar/rack/flat surface where desired. **Note, installation may be easier if certain items are removed from vehicle first. Flat surface mounting will require drilling at this step to continue.**
2. Insert the 1/4" screws [items #5 (UTV) or #6 (ATV) depending on length needed] thru the plastic base (item #1), metal backer plate (item #2) and then thru the other metal backer plate on the rear side of the rollbar/rack/flat surface. Loosely fasten the assembly with locknuts (item #7), do not tighten yet. The rubber strip pads (item #8) can be used to increase friction on the mounting surfaces to help eliminate the possibility to rotate on the roll bar/rack.

3. Tighten the screws/locknuts evenly to torque specification.

WARNING: Do not over tighten hardware or damage can occur.

Item	N*m	kgf*m	lbf*ft
5, 6	5	0.5	4

4. Insert the Ratcheting Rhino Grip assembly into the mounting base and position as desired. Secure position by inserting the Kwik Clip (item #4) into grip assembly. **Note, the grip can rotate 360°.**
5. To rotate, simply slide the Kwik Clip (item #4) out of the grip and rotate to the setting of your choice, reinsert the clip to secure position. **Note, the Kwik clip can only be inserted on the push button side of the grip.**
6. Repeat steps 1-5 for installing the other grip assembly onto the opposite side of UTV, ATV or flat surface.

Use and Care Information:

- An occasional shot of silicone lubricant will keep the grip arms moving freely.
- Check the accessory mounts frequently and retighten if necessary.
- Replace this accessory with a new one if it is damaged or discolored excessively.
- When this accessory becomes dirty, rinse it thoroughly with cool water to remove loose dirt, then wipe with a clean cloth or sponge.
- Never use petroleum solvents such as gasoline, thinner, benzene, acid or alkaline cleaners.

For additional assistance, please contact Kolpin customer service department at (877) 956-5746 or (763) 478-5800 or email customerservice@kolpin.com

One Year Limited Warranty

For the period of one (1) year from the purchase date, Kolpin will replace for the original purchaser, free of charge, any part or parts found upon examination by Kolpin to be defective in material, workmanship, or both.

All transportation costs incurred submitting product to Kolpin for warranty consideration must be borne by the purchaser. If Kolpin determines that the product must be returned to the factory for credit, please call 1-877-956-5746 for a Return Merchandise Authorization (RMA) number and shipping instructions.

This warranty does not apply to parts that have been damaged by accident, alteration, abuse, improper maintenance, normal wear, or other causes beyond the manufacturer's control. In order to protect you and your ATV, certain parts of the accessory system and/or hardware are designed to fail when the equipment is over-stressed. Parts that are lost due to loosening and improper maintenance are not covered under warranty. This warranty does not cover removal or reinstallation labor fees of the plow system and related components.

Peripheral products such as engines, electric motors, and actuators may carry an original manufacturer's warranty. Most hardware is general in nature and is easily obtained locally. Be sure to replace with minimum metric class 8.8 specification.