



Rhino Slim Line Roof Installation Instructions

Stock No.: 1419




Please read and understand these instructions completely before installation to avoid injury to yourself or damage to the vehicle or accessory.

Dealer: These instructions contain important information for future reference and must be given to the customer at time of purchase or upon completion of installation.




Parts List:

ITEM	PART NAME	DESCRIPTION	QTY.
1	Roof	Rotomolded roof	1
2	Screw	5/16-18 x 2.0" lg. button head cap screw, stainless steel	4
3	Washer	5/16" x 1.0" O.D. fender washer, stainless steel	4
4	Washer	5/16" flat washer, stainless steel	4
5	Nut	5/16-18 nylock nut, stainless steel	4
6	Bracket	Rhino mounting bracket set, stainless steel (two left-hand; two right-hand)	1

- 1) Remove the existing factory screw on the roll cage as shown in **Image "A"**. Mount the support bracket using the factory screw as shown in **Image "B"**. **Please note when mounting all of the support brackets, the top mounting tabs always point toward the center of the vehicle.**
- 2) Remove the existing factory screw on the roll cage as shown in **Image "C"**. Mount the support bracket using the factory screw as shown in **Image "D"**.

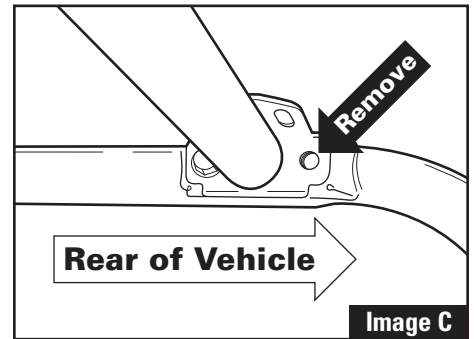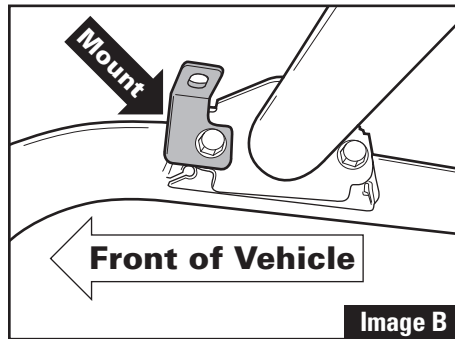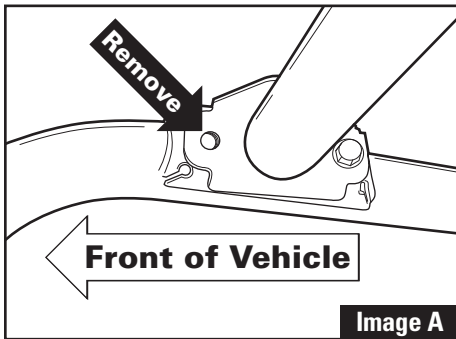

- 3) Repeat Steps 1 and 2 on the opposite side of the vehicle with the remaining two brackets.
- 4) Place the Slim Line Roof on the top of the roll cage. Utilizing the four 5/16 x 2.0" lg. button head cap screws and four 5/16" x 1.0" O.D. fender washers, mount the roof to the roll cage by guiding the screws through each of the four holes in the roof and through the support brackets as shown in **Images "E"** and **"F"**.
- 5) Place a 5/16" flat washer and 5/16" nylock nut on each of the four screws and tighten as shown in **Image "F"**. **Be careful not to overtighten the nuts.**

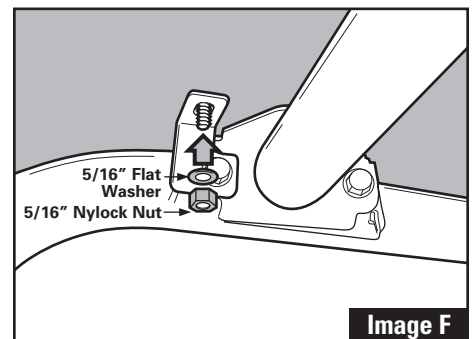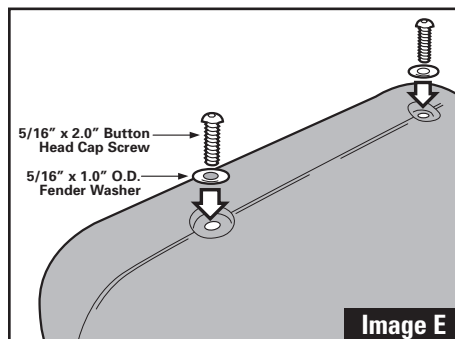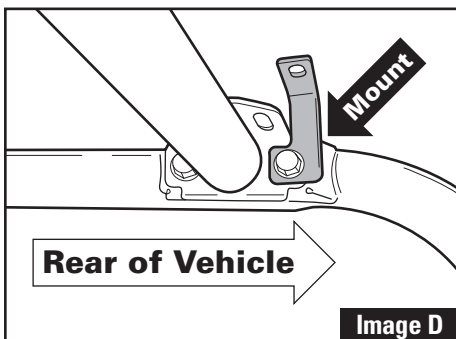

WARNING Failure to follow these installation instructions completely may void any warrantable components and result in property damage or personal injury. NEVER operate or transport UTV with unsecured cargo.

For additional assistance, please contact our customer service department at:
Kolpin Outdoors, Inc. | 205 N. Depot Street | Fox Lake, WI 53933 | 1.877.956.5746 | customerservice@kolpin.com