



Teryx Sport Roof Installation Instructions

Stock No.: 1496




Please read and understand these instructions completely before installation to avoid injury to yourself or damage to the vehicle or accessory.

Dealer: These instructions contain important information for future reference and must be given to the customer at time of purchase or upon completion of installation.




Parts List:

Item	Part Name	Description	Qty.
1	Roof	Rotomolded roof w/optional stereo and speaker mounts	1
2	Screw	M8 x 38mm lg. button head cap screw, stainless steel screw, stainless steel	4
3	Washer	M8 x 30mm O.D. fender washer, stainless steel	4
4	Washer	M8 flat washer, stainless steel	4
5	Nut	M8 nylock nut, stainless steel	4
6	Bracket	Teryx mounting bracket set, stainless steel (front left and right; rear left and right)	1

- 1) Remove the existing factory screw on the roll cage as shown in **Image "A"**. Mount the support bracket using the factory screw as shown in **Image "B"**. **Please note when mounting all of the support brackets, the top mounting tabs always point toward the center of the vehicle.**
- 2) Remove the existing factory screw on the roll cage as shown in **Image "C"**. Mount the support bracket using the factory screw as shown in **Image "D"**.

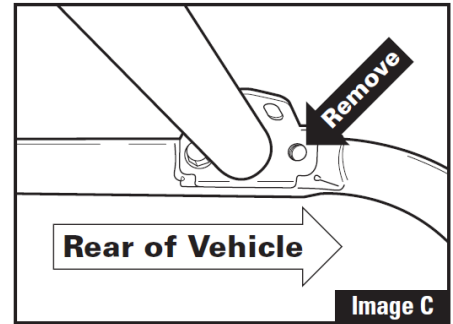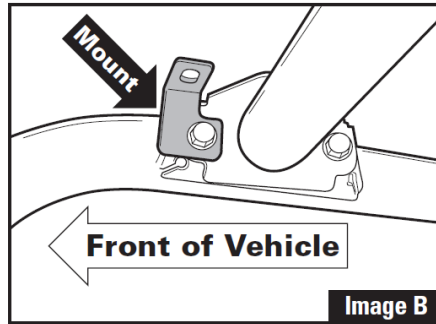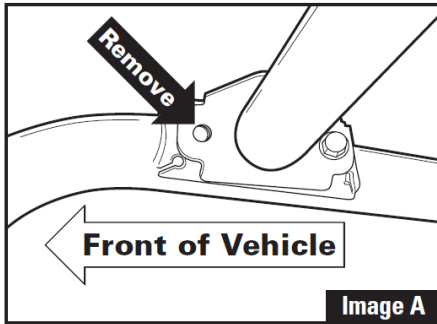

- 3) Repeat Steps 1 and 2 on the opposite side of the vehicle with the remaining two brackets.
- 4) Place the Sport Roof on the top of the roll cage. Utilizing the four M8 x 38mm button head cap screws and four M8 x 30mm O.D. fender washers, mount the roof to the roll cage by guiding the screws through each of the four holes in the roof and through the support brackets as shown in image "E" and "F".
- 5) Place a M8 flat washer and M8 Nylock nut on each of the four screws and tighten as shown in **Image "F"**. **Be careful not to overtighten the nuts.**

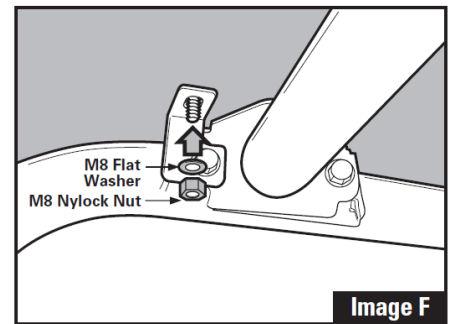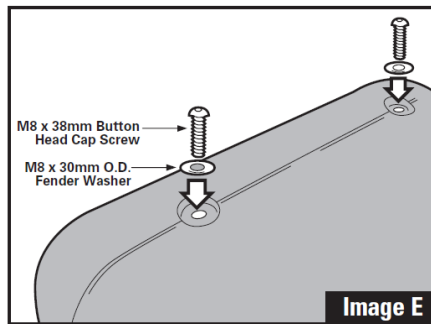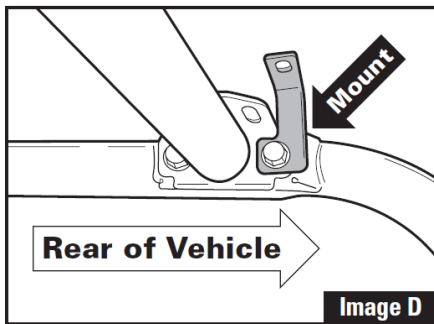

WARNING Failure to follow these installation instructions completely may void any warrantable components and result in property damage or personal injury. NEVER operate or transport UTV with unsecured cargo.

For additional assistance, please contact our customer service department at:
Kolpin Outdoors, Inc. | 1.877.956.5746 | customerservice@kolpin.com




Veillez lire entièrement ces instructions et vous assurer de bien les comprendre avant d'entreprendre l'installation afin d'éviter de vous blesser ou d'endommager le véhicule ou un accessoire.

Avis au détaillant : Ces instructions contiennent de l'information importante pour référence ultérieure et doivent être remises au client au moment de l'achat ou après l'installation.




Liste des pièces :

Article	Désignation	Description	Qté
1	Toit	Toit à rotomoulage avec supports pour système audio et haut-parleurs (en option)	1
2	Vis	Vis d'assemblage à tête ronde M8 x 38 mm long., acier inoxydable	4
3	Rondelle	Rondelle large M8 x 30 mm diam. ext., acier inoxydable	4
4	Rondelle	Rondelle plate M8, acier inoxydable	4
5	Écrou	Écrou nylock M8, acier inoxydable	4
6	Support	Ensemble de supports de montage Teryx, acier inoxydable (avant et arrière, gauche et droite)	1

- 1) Enlevez la vis d'origine de la cage de retournement comme le montre l'**image A**. Posez le support de montage en utilisant la vis d'origine comme le montre l'**image B**. **Pour la pose de tous les supports de montage, la patte de montage supérieure doit toujours être orientée vers le centre du véhicule.**
- 2) Enlevez la vis d'origine de la cage de retournement comme le montre l'**image C**. Posez le support de montage en utilisant la vis d'origine comme le montre l'**image D**.

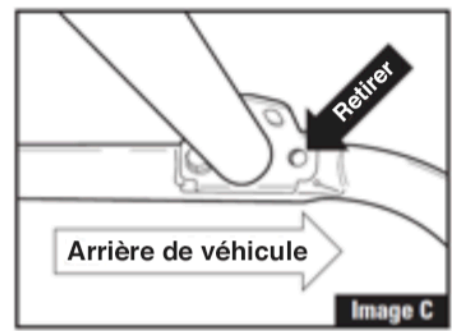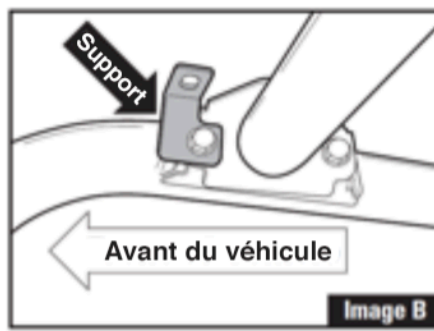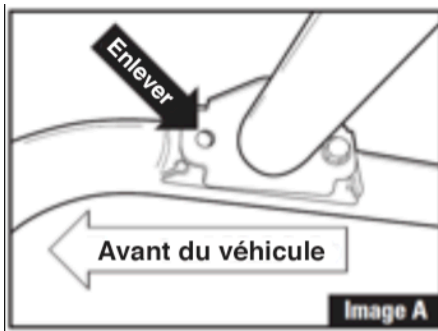

- 3) Répétez les étapes 1 et 2 de l'autre côté du véhicule avec les deux autres supports.
- 4) Placez le toit sport sur la cage de retournement. En utilisant les quatre vis d'assemblage à tête ronde M8 x 38 mm et les quatre rondelles larges M8 x 30 mm diam. ext., fixez le toit à la cage de retournement en guidant les vis dans chacun des quatre trous pratiqués dans le toit et dans les supports de montage comme le montrent les images E et F.
- 5) Placez une rondelle plate M8 et un écrou nylock M8 sur chacune des quatre vis et serrez-les comme le montre l'**image F**. **Évitez de trop serrer les écrous.**

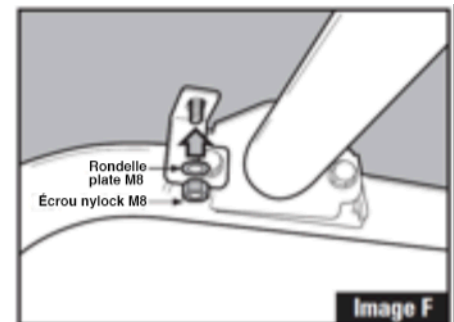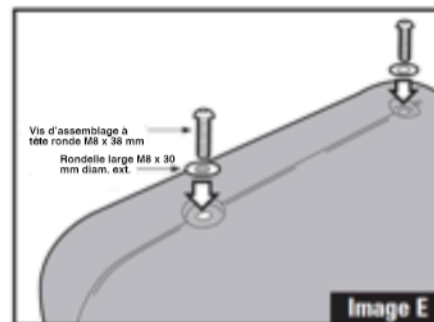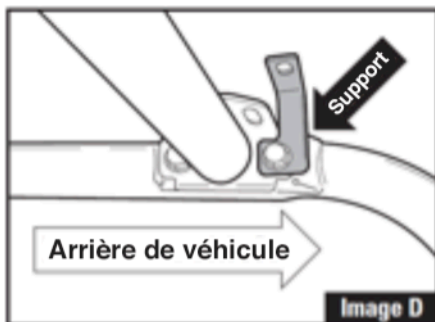

⚠ WARNING Le non-respect de ces instructions d'installation risquerait d'annuler toute garantie et d'entraîner des dommages ou des blessures. N'utilisez ou ne transportez JAMAIS un VUTT contenant une charge non assujettie.

Pour obtenir de l'assistance, veuillez communiquer avec notre service à la clientèle :
Kolpin Outdoors, Inc. | 1 877 956-5746 | customerservice@kolpin.com