



UNIVERSAL SADDLE STORAGE GEN 2

Installation Instructions Stock No.: 4412

Please read and understand these instructions completely before installation to avoid injury to yourself or damage to the vehicle or accessory.

Dealer: These instructions contain important information for future reference and must be given to the customer at time of purchase or upon completion of installation.

Parts List:

ITEM	PART NAME	DESCRIPTION	QTY.
1	Saddle Box	UTV Saddle Storage Box	1
2	U-Style Nut	M6 U-style nut (Rhino mounting only)	2
3	Screw	M6 x 25mm lg. hex head cap screw, stainless steel	2
4	Washer	1/4" x 1.00" O.D. fender washer, stainless steel	2
5	Washer	M6 lock washer, stainless steel	2
6	Nut	M6 nylok nut, stainless steel	2



Image A

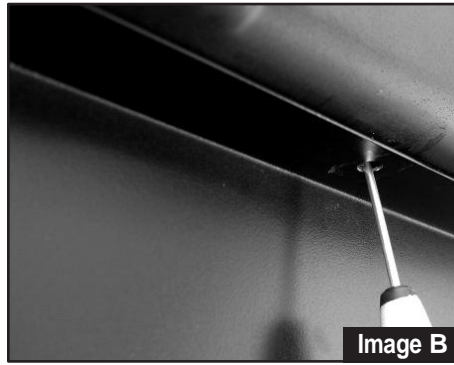


Image B

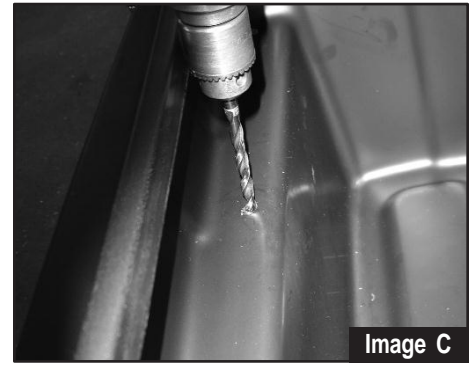


Image C

Instructions for installing UTV Saddle Storage Box to a Yamaha Rhino (see opposite side for installing on other vehicles):

- 1) Remove the rear fender to access the dump bed as shown in **Image "A"**. The plastic fasteners used on the Yamaha Rhino require a very light force to unscrew and remove with a Phillips head screwdriver.
- 2) Place the UTV Saddle Storage Box as desired and mark the hole locations to be drilled as shown in **Image "B"**. **Be careful not to locate the box where it may cause problems with tilting your vehicle's bed.**
- 3) Remove the box and drill the marked locations using a 5/16" diameter drill bit as shown in **Image "C"**.

4) Attach the supplied M6 U-style nuts to the corresponding mounting holes on your vehicle as shown in **Image "D"**.

5) Replace the rear fender and associated hardware.

6) Return the UTV Saddle Storage Box to the mounting location and secure with the supplied M6 x 25mm lg. hex head cap screws, M6 lock washer, and 1.00" O.D. fender washer as shown in **Image "E"**.

7) Repeat this process for mounting the UTV Saddle Storage Box unit to the opposite side of your dump bed.



Image D




Image E

8) **Maintenance and Care:** Tighten all hardware after first use and periodically thereafter.

⚠ WARNING Failure to follow these installation instructions completely may void any warrantable components and result in property damage or personal injury. NEVER operate or transport UTV with unsecured cargo. NEVER use this product or any part of it for pulling or towing.

Instructions for installing the UTV Saddle Storage Box to other vehicles:

- 1) Position the UTV Saddle Storage Box as desired and mark the hole locations to be drilled in the unit. **Be careful not to locate the box where it may cause problems with tilting your vehicle's bed.** The Saddle Box should be mounted in a similar fashion as described in the Yamaha Rhino installation instructions, but the U-style nuts will not be used. Additional fasteners may be mounted as shown in **Image "F"**.
- 2) Remove the box and drill marked locations using a 5/16" diameter drill bit.
- 3) Return the UTV Saddle Storage Box to its desired location and mark and drill corresponding holes in dump bed. Additional screws may be added to the side walls of your dump bed as shown in image "F".
- 4) Return the UTV Saddle Storage Box into position and secure with the supplied M6 x 25mm lg. hex head cap screws, M6 lock washer, and 1.00" O.D. fender washer.
- 5) Repeat this process for mounting the UTV Saddle Storage Box unit to the opposite side of your dump bed.
- 6) **Maintenance and Care:** Tighten all hardware after first use and periodically thereafter.

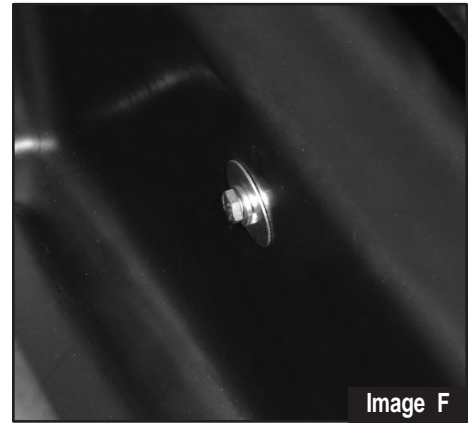

⚠ WARNING Failure to follow these installation instructions completely may void any warrantable components and result in property damage or personal injury. NEVER operate or transport UTV with unsecured cargo. NEVER use this product or any part of it for pulling or towing.

For additional assistance, please contact our customer service department at:

Kolpin Outdoors, Inc. | 205 N. Depot Street | Fox Lake, WI 53933 | 1.877.956.5746 | customerservice@kolpin.com