



POLARIS SADDLE STORAGE GEN 2

Installation Instructions Stock No.: 4413



Please read and understand these instructions completely before installation to avoid injury to yourself or damage to the vehicle or accessory.

Dealer: These instructions contain important information for future reference and must be given to the customer at time of purchase or upon completion of installation.

Parts List:

ITEM	PART NAME	DESCRIPTION	QTY.
1	Saddle Box	UTV Saddle Storage Box	1
2	KXP Plunger	KXP UTV Plunger	2

- 1) Turn Saddle Storage box upside down and locate two dimples as shown in Image A. Drill dimples with 5/16" drill bit.
- 2) Assemble KXP plungers into Saddle Storage box as shown in Image B. Only snug handles tight, if compressed too much the plunger will not fit in the bed rail.
- 3) Place saddle storage into desired location on bed rail as shown in Image C. Tighten plunger handle to secure. Do Not Over Tighten – secure fastening is possible without over stressing components!

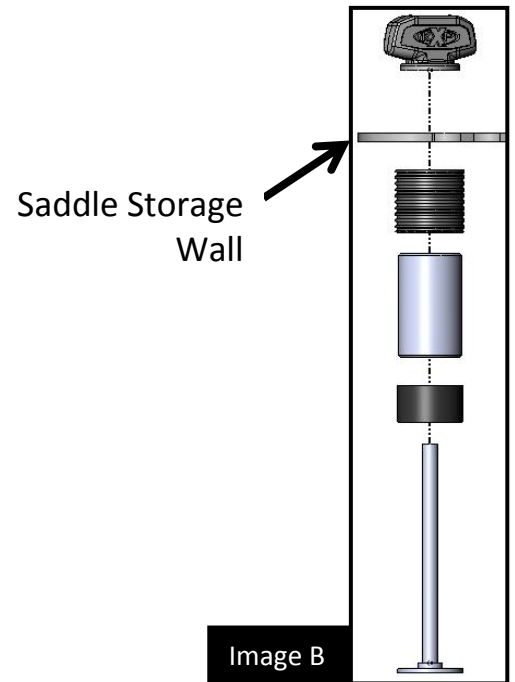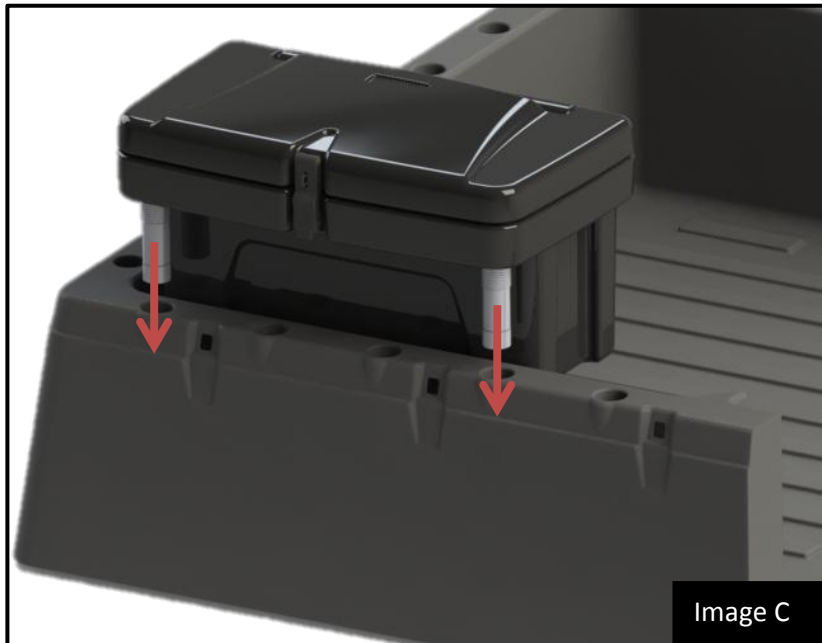

WARNING Failure to follow these installation instructions completely may void any warrantable components and result in property damage or personal injury. NEVER operate or transport UTV with unsecured cargo. NEVER use this product or any part of it for pulling or towing.

For additional assistance, please contact our customer service department at:

Kolpin Outdoors, Inc. | 205 N. Depot Street | Fox Lake, WI 53933 | 1.877.956.5746 | customerservice@kolpin.com