



## Legacy ATV Storage Box with Backrest Installation Instructions

Stock No.: 4447

**Please read and understand these instructions completely before installation to avoid injury to yourself or damage to the vehicle or accessory**


**Dealer:** These instructions contain important information for future reference and must be given to the customer at time of purchase or upon completion of installation.

### Parts List:

ITEM	PART NAME	DESCRIPTION	QTY.
1	STORAGE BOX	LEGACY ATV STORAGE BOX WITH BACKREST	1
2	U-BOLT	¼"-20 X 2.50" U-BOLT	4
3	U-BOLT PLATE	U-BOLT PLATE, ZINC PLATED	4
4	THREAD CAP	BLACK THREAD PROTECTORS	8
5	WASHER	FLAT BONDED WASHER	8
6	WASHER	LOCK WASHER	8
7	NUT	¼"-20 FINISH NUT	8




**Image A**

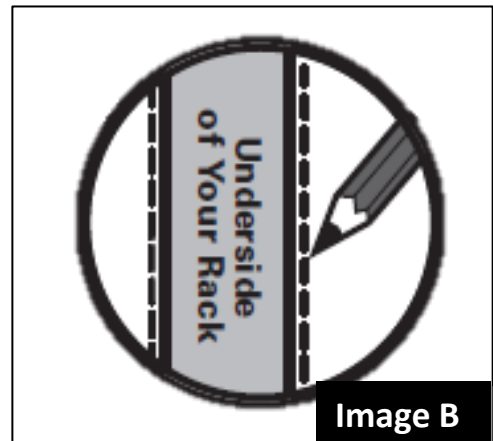


**Image B**

- 1) Place the Legacy Box on the rear rack of ATV as shown in **Image "A"**.
- 2) Once you have the storage box positioned properly, use a pencil to mark four mounting points. Do this by scribing a line at these locations on each side of the rack as indicated in **Image "B"**.
- 3) After you have marked the four mounting locations, remove the box and carefully lay it upside-down on a level surface. Center one of the supplied U-bolt plates on the lines you have just marked. Using the U-bolt plate as a template, mark the two hole locations with a pencil as indicated in **Image "C"**. Repeat this step in all four of your mounting locations

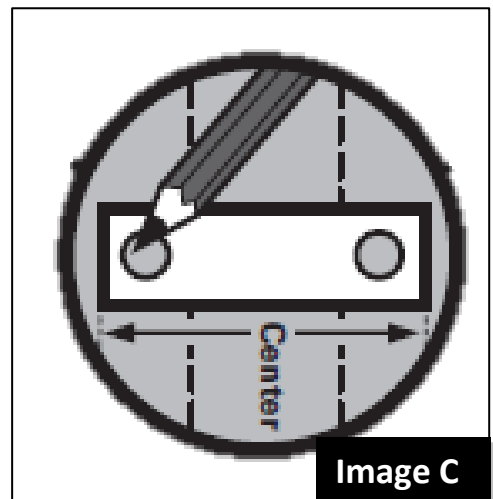


**Image C**


- 4) Once you have accurately marked both hole locations at all four mounting points, carefully use a 5/16" bit to drill eight holes as indicated in **Image "D"**
- 5) Place the box back onto your vehicle's rack while feeding the supplied U-bolts around the rack and through the holes you have just drilled in the bottom of the box as indicated in **Image "E"**. Repeat this step in all four mounting locations.
- 6) Place the supplied 1/4" bonded sealing washers over the U-bolts by threading them over both ends as indicated in **Image "F"**. Repeat this step in all four mounting locations.
- 7) Finish mounting the box by sliding the supplied U-bolt plate over all four U-bolts and fasten with the 1/4" lock washers and 1/4"-20 nuts as indicated in **Image "G"**. Repeat this step in all four mounting locations. **Do not over tighten.**
- 8) Slide the thread caps over the U-bolts as indicated in **Image "H"**. Repeat this step in all four mounting locations.
- 9) \*Optional\* repeat all steps for Front Box using two U-bolts.

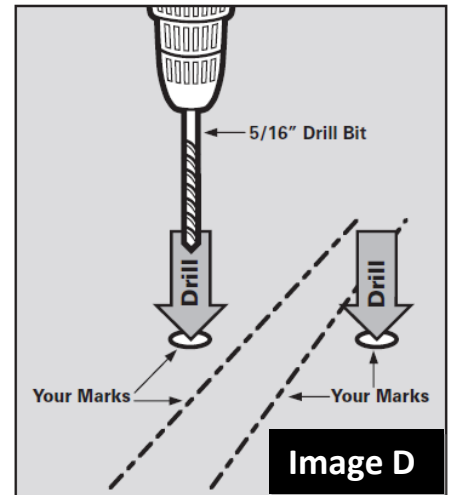


**Image D**

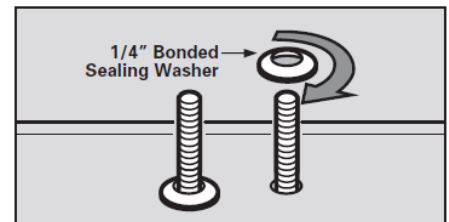

**Image F**

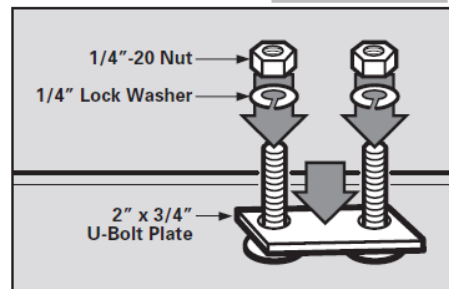

**Image G**

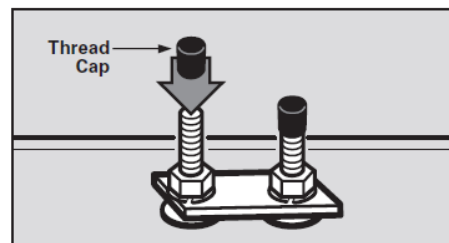


**Image H**

**⚠ WARNING** Failure to follow these installation instructions completely may void any warrantable components and result in property damage or personal injury. **NEVER** operate or transport ATV with unsecured cargo.

For additional assistance, please contact our customer service department at:

Kolpin Outdoors, Inc. | 1.877.956.5746 | [customerservice@kolpin.com](mailto:customerservice@kolpin.com)

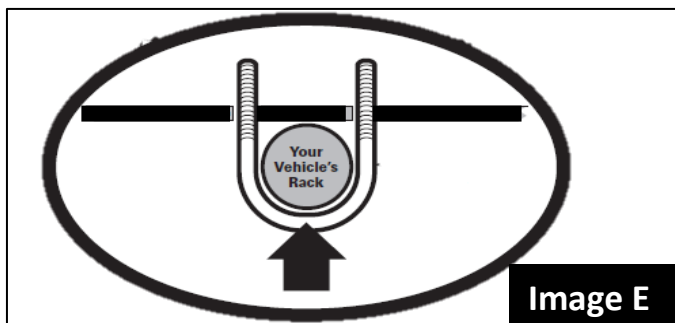

**Image E**



# ⚠ WARNING

**NEVER** operate with a passenger. Passengers affect balance and steering and increase risk of losing control!

Improper use of this product can result in **SEVERE INJURY** or **DEATH!**