




Kolpin Ranger UTV Side Mirror - Pair

Product Installation Instructions | Part No: 98317

Please read and understand these instructions completely before installation to avoid injury to yourself or damage to the vehicle or accessory

Parts List:

ITEM	PART NAME	SPARE P/N	DESCRIPTION	QTY.
1	MIRROR	N/A	KOLPIN SIDE UTV MIRROR, LEFT	1
2	MIRROR	N/A	KOLPIN SIDE UTV MITTOR, RIGHT	1
3	BIG PAD	N/A	FLAT SHIM, RUBBER GRIPPING PAD	2
4	WASHER	N/A	1.25" OD FORMED WASHER	2
5	WASHER	N/A	.875" OD FORMED WASHER	2
6	SPRING	N/A	.6875" OD x .8125 LONG SPRING	2
7	WASHER	N/A	M6 x 20mm OD FLAT WASHER	2
8	NUT	N/A	M6-1.0 HEX NUT	2
9	PIVOT	N/A	FEMALE MIRROR PIVOT JOINT	2
10	PIVOT	N/A	MALE MIRROR PIVOT JOINT	2
11	FRONT CLAMP	N/A	FRONT METAL CLAMP, PROFILE TUBING	2
12	NUT	N/A	M6 -1.0 BARREL NUT	4
13	SCREW	N/A	M5-0.8 x 25mm SOCKET HEAD CAP SCREW	2
14	WASHER	N/A	M6 X 14mm OD FLAT WASHER	4
15	WASHER	N/A	M6 LOCK WASHER	4
16	SCREW	N/A	M6-1.0 x 12mm SCREW	4
17	WASHER	N/A	M5 LOCK WASHER	2
18	WASHER	N/A	M5 FLAT WASHER	2
19	SMALL PAD	N/A	FLAT SHIM, RUBBER GRIPPING PAD	2
20	BACK CLAMP	N/A	BACK METAL CLAMP, PROFILE TUBING	2

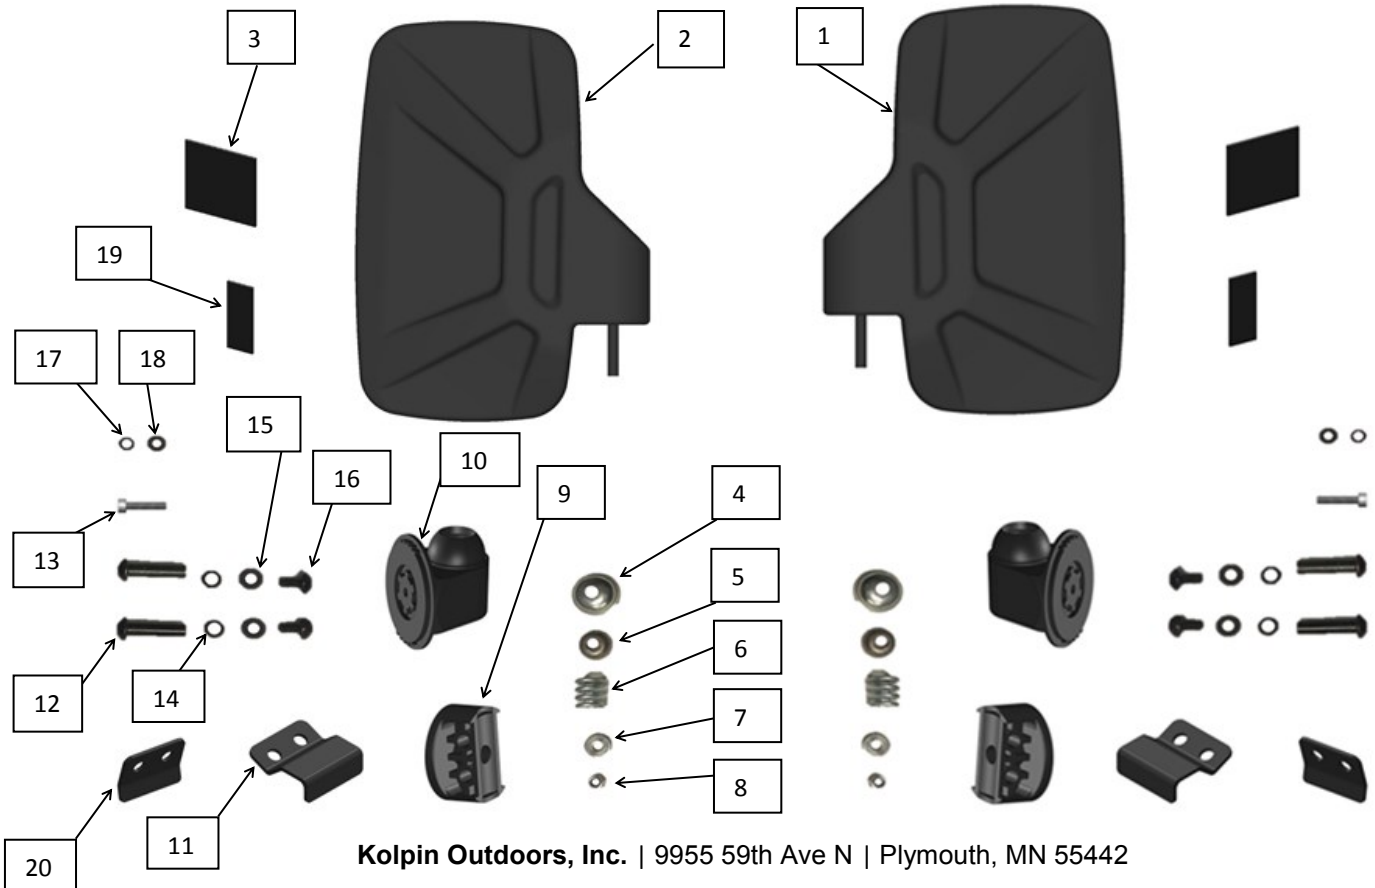


Kolpin Outdoors, Inc. | 9955 59th Ave N | Plymouth, MN 55442

(877) 956-5746 or (763) 478-5800 | www.kolpin.com | customerservice@kolpin.com

Install Preparation:

1. Adhere the small rubber grip pad (item 19) to the inside surface of the back clamp (item 20) as shown. The small pad serves as a gripping pad to the vehicle profile tubing.
2. Adhere the big rubber grip pad (item 3) to the inside surface of the front clamp (item 11) as shown. The big pad serves as a gripping pad to the vehicle profile tubing.

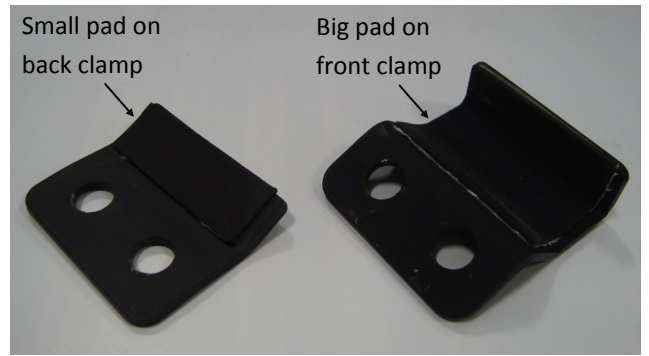

Mirror Mounting:


1. Attach to desired area on UTV vehicle tube, secure front and back clamps using M6 barrel nut (item 12), M6 flat washer (item 14), M6 lock washer (item 15) and M6 screw (item 16).
2. Loosen M5 socket head cap screw (item 13) inside female pivot joint (item 9) using a 4mm allen key wrench.
3. Pivot mirror to desired angle and secure M5 socket head cap screw (item 13). You can also rotate mirror in and out to desired viewing angle.
4. To increase the amount of force needed to rotate mirror, simply tighten the tensioning nut (item 8) 2 revolutions.

WARNING: Do not over tighten hardware or damage can occur.

For additional assistance, please contact Kolpin customer service department at (877) 956-5746 or (763) 478-5800 or email customerservice@kolpin.com



Note: If any hardware is missing, do not return to the store. Call us to help, Toll Free 1-877-956-5746.

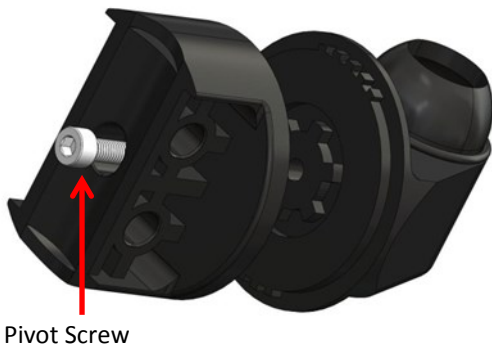



One Year Limited Warranty

For the period of one (1) year from the purchase date, Kolpin will replace for the original purchaser, free of charge, any part or parts found upon examination by Kolpin to be defective in material, workmanship, or both.

All transportation costs incurred submitting product to Kolpin for warranty consideration must be borne by the purchaser. If Kolpin determines that the product must be returned to the factory for credit, please call 1-877-956-5746 for a Return Merchandise Authorization (RMA) number and shipping instructions.

This warranty does not apply to parts that have been damaged by accident, alteration, abuse, improper maintenance, normal wear, or other causes beyond the manufacturer's control. In order to protect you and your ATV, certain parts of the plow system and/or hardware are designed to fail when the equipment is over-stressed. Parts that are lost due to loosening and improper maintenance are not covered under warranty. This warranty does not cover removal or reinstallation labor fees of the plow system and related components.

Peripheral products such as engines, electric motors, and actuators may carry an original manufacturer's warranty. Most hardware is general in nature and is easily obtained locally. Be sure to replace with minimum metric class 8.8 specification.

Kolpin Outdoors, Inc.

Telephone: (763)-478-5800

Toll Free: (877)-956-5746

Fax Number: (800)-245-7569

www.kolpin.com

Email: customerservice@kolpin.com